



ul. Konstytucyjna 79/81  
95-200 Pabianice  
tel/fax 48 42 2270971 POLAND  
e-mail: fif@fif.com.pl

# DMA-1 DIGITAL CURRENT INTENSITY INDICATOR one-phase



5 19 0 8 3 1 2 1 5 9 2 0 0 6

www.fif.com.pl

 
F&F products are covered by a 24 months warranty from date of purchase

## PURPOSE

Current intensity indicator is devised to continually measure the value of the current in a circuits of one-phases.

## FUNCTIONING

Indicator DMA-1 with standard measurement system display current load in electric system.

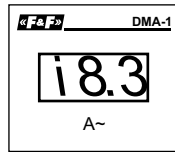


## TECHNICAL DATA

supply	100+300V AC
supply frequency	45+55Hz
current load	
version 20A	20A
relays version	input value for relay
max temporary current overloading	40A (<1sec)
precision	1%
display	segment LED 10x6mm
power consumption	4W
working temperature	-25+50°C
dimensions	3 modules (52,5mm)
fixing	on rail TH-35

## WIRING DIAGRAM

 Version 20A

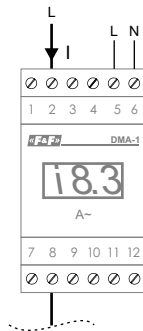


## ASSEMBLY


1. Take OFF the power.
2. Put on indicator on the rail.
3. Connect power to joints 5-6 with marks.
4. **Version 20A:** measurement joints 2-8 connect in line to controlled system.  
**Relays version:** measurement joints 2-8 connect in line to relays control system.

## ATTENTION!

During installation indicator in relays version need connect relays with value which is give on the box.

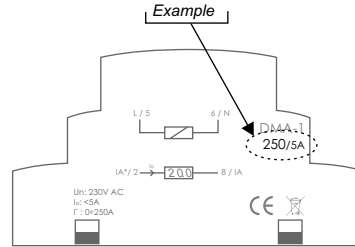

## Relays version

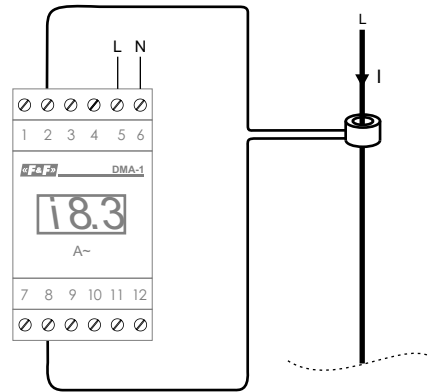

A090708