

## DATA SHEET



### rH- R1S1 / rH-R1S1i

Single-channel relay with single input  
of the F&Home RADIO system.

---

The rH-R1S1 is a combination of relay and contact input. The module sends information about opening or closing of the contacts to the system and controls the relay that can activate any electrical circuits. Communication with the server is done via radio. The module has one physical input for connecting one momentary button, and one input of the relay. The load of power input can be resistive, inductive and capacitive, both in direct and alternating current circuits. The rH-R1S1 module is particularly suitable for controlling fan, lightning and to switching off an electric socket.

**AUTONOMOUS MODE**

If the module is disconnected from the server, it goes into autonomous mode. Short press of the button connected to contact 1 switches on or off the relay.

Conditions for autonomous mode to activate:

1. Correct connection of S1 contact with the button;
2. Option *Offline: autonomous mode* is enabled in the *Installer settings*.

The rH-R1S1 module is represented by an object, which consist of one binary input and one binary (bistate) output of the relay that corresponds to a physical input. The input of the object is used for controlling the relay, and the information about operating state of the relay is feed on the output. The element has also one binary (bistate) input and one binary output that correspond to a physical input. Closing or opening the contact causes the logical state to change at the output.

Inputs		
Figure	Name	Type
	Relay control	binary
	Channel 1	Binary

Outputs		
Figure	Name	Type
	Confirmed relay status	binary
	Channel 1	binary



Installer settings in the configuration program

Feature name	Description	Range	Unit / Description
Connection monitoring	Sets action in case of loss of connection to the server (information about the modules out of reach).	Standard module	Information on the standard output SX 752
		Alarm module	Information on the alarm output SX 752
		Unmonitored module	No connection correctness control
The delay in signaling a lack of coverage	Sets the delay after which the module is reported that it is beyond the coverage range of the server	1 - 5	
Relay mode	Sets the operating mode of the relay in the standby mode	Normally open (NO)	Applying logical state '1' on the input causes closing of the contact and applying logical state '0' its opening
		Normally closed (NC)	Applying logic state '1' on the input causes opening of the contact and applying logical state '0' its closing
Offline: autonomous mode	Sets the behavior of the module when there is no connected to the server	Enabled	When there is no connection to the server, the module operates as a normal bistable relay.
		Disabled	When there is no connection to the server, the module is inactive.
Offline: enable for [minutes] after switching the power on	Sets the operation time of the module when there is no connection to the server	0-240	minute
Contact active, when	Defines the status of contacts on the output for which the status is to be set active, which means logical state 1	Closed	Logical state '1' is generated on the output when the contacts are closed.
		Open	Logical state '1' is generated on the output when the contacts are open.
Maximum activity time (0 - unlimited)	Sets the time after which the output status will be changed to logical state '0' in the absence of a response from the module.	0 - 600	second

*Contact active when* feature: the system adopted positive logic. This means that the idle state is '0', and the active state (unstable) is '1'. For momentary button (bell button) the stable state is an inactive state - at the output of the object we have logical state '0'. Regardless of the selected *Contact active* option and the actual status of contacts, shortly after the project starts the outputs have the logical state '0'. It takes a minute to synchronize with the module and the outputs states are updated. If you choose the *Contact active, when open* option, which means the contact inputs are permanently open, then on the appropriate output of the object will cyclically appear logical state '1' for the time specified in the *Installer Settings*, then the logical state '0' before syncing. If you choose *Contact active, when closed* option and contact inputs are permanently closed, then the appropriate output object will appear cyclically logical state of '1' for the time specified in the *Installer Settings*, then the logical state '0' before syncing. *Maximum activity time* feature: setting the parameter to '0' disables the auto-zeroing of the output. This is usually the case when the contact is treated as a bistable (for example as a limit switch). The maximum activity time has been introduced so that the logic state '1' did not last non-stop, when communication with the module is lost (except in the case where a user himself forced such a situation in *Installer Settings*).

The simplest use of the object is switching from a mobile panel with the conformation of the switching.

The button icon switches on and off the input of the rH-R1S1 block, while the control icon indicates the activation of the relay (retrieves information from the binary output of the rH-R1S1 block).



The module is available in two variants:

rH-R1S1 - basic version of the relay with a capacitor power supply

rH-R1S1i - next (current) generation of the relay with pulse power supply

Technical specifications table

Rated supply voltage	230V AC
Supply voltage tolerance	-20%, +10%
Rated power consumption	0.5 W
Radio link (operating frequency)	868 MHz
Signal strength	9 mW
Transmission type	two-way
Coding	yes
Range in open space	100 m
Period of logging in the system	30 seconds
Relay number	1
Relay contact current	4 A / 230 V AC
Input triggered with level L or N	one-contact
Input current	<=1 mA
Storing temperature	-20°C to +50°C
Working temperature	+10°C, +45°C
Humidity	<=85% (without condensation and aggressive gases)
Dimensions	48 x 48 x 22 mm
Ingress protection	IP20
Operating position	any
Enclosure type	in-wall
Built-in security	against overheating
Autonomous mode	yes

**Registration in the system**

1. Select the registration method in the configurator.
2. Press and hold button on the housing.
3. After 5 seconds the module will register itself in the system or the program will report an error in case of failure.

- Disconnect the power supply circuit; make sure using the appropriate device if there is no voltage on the supply lines.
- Connect the wires according to the diagram above.
- If there are uninsulated wires in the installation box, perform adequate insulation.
- Place the module in the installation box.
- Place the antenna of the module parallel to one of the antennas of the server and move it away as far as possible from other wires.
- Register the module in the system.
- Close the installation box or install a button.

An example of connecting a momentary button and light bulb to the RH-R1S1 module.

Module operation indication (green LED)	
Mode	Description
Online (registered)	LED lights, dims during radio transmission
Registration	LED pulsating quickly
Offline	LED flashes every half a second - a module has lost the radio connection to the server or is not registered
Not programmed	LED flashes: lights, dims for 100 ms every 1 second - the module should be returned to the

## **WARNING**

The connection method is specified in this manual. Any activities related to installation, connection and regulation should be carried out by persons with electrical qualifications who are familiar with this manual and features of the module. Manner of transport, storing and using the module affects its proper operation. Installation of the module is not recommended in the following cases: missing components, damage to the module or its deformation. In case of malfunction the module should be returned to the manufacturer.