

F&F Filipowski sp. j. Konstantynowska 79/81 95-200 Pabianice phone/fax: (+48 42) 215 23 83 / 227 99 71 POLAND http://www.fif.com.pl e-mail: fif@fif.com.pl

PULSE METER

CLI-11T

WARRANTY. The F&F products are covered by a warranty of the 24 months from the date of purchase. Effective only with proof of purchase. Contact your dealer or directly with us. More information how to make a compliant can be found on the website: <a href="https://www.ffc.com.pl/reklamacie">www.ffc.com.pl/reklamacie</a>





Do not dispose of this device to a garbage bin with other unsorted wastel in accordance with the Waste Electrical and Electronic Equipment Act any household electrowaste can be turned in free of charge and in any quantity to a collection point established for this purpose, as well as to the store in the event of purchasing now equipment (so per the old for new longardless of brand). Electro-waste thrown in the garbage bin or abandoned in the boson of nature pose a threat to the environment and human health.

# Purpose

Pulse meter is intended for counting AC/DC voltage signals, generated by additional peripheral devices in order to determine the number of carried out working cycles in automatics systems, e.g. in order to control the number of press strokes, the number of revolutions of a rotating device, the number of components leaving the production line, etc.

# Functioning

CLI-11T meter is an electronic, one-way meter, enabling the counting of pulses from 0 to 999999 range (six digits). It is equipped with RESET input for the connection of external button and RESET input for the connection of an external button, enabling the resetting of the meter state for any value.

- 1 -

# Assembly

- $1.\,\mathsf{Take}\,\mathsf{OFF}\,\mathsf{the}\,\mathsf{power}.$
- 2. Unscrew the nut and remove the attachment plate.3. Embed meter in the assembly hole, attach plate and tighten the cap
- Embed meter in the assembly hole, attach plate and tighten the cap screws.
- 4. To joints U (read input) connect the voltage which is reading signal (impulse).
- 5. To RESET joints connect monostabile close button.

 
ATTENTION!

Do not connect any voltage.

# Technical data

supply (non-voltage type)	internal battery
battery life	5 years
read input voltage	4÷30V DC
input RESET	4÷30V DC
display	8 characters / h=6,7mm
precision	1%(±1digit)
working temperature	-10÷40°C
dimensions	48×24×52mm
fixing hole	45×23mm
protection level	IP20

# Wiring diagram



D141121 - 2 -