



F&F Filipowski L.P.  
Konstantynowska 79/81, 95-200 Pabianice, POLAND  
phone/fax (+48 42) 215 23 83 / (+48 42) 227 09 71  
www.fif.com.pl; e-mail: biuro@fif.com.pl

## WN-723S

Voltage indicator,  
3-phase



**Do not dispose of this device in the trash along with other waste!** According to the Law on Waste, electro coming from households free of charge and can give any amount to up to that end point of collection, as well as to store the occasion of the purchase of new equipment (in accordance with the principle of old-for-new, regardless of brand). Electro thrown in the trash or abandoned in nature, pose a threat to the environment and human health.



### Purpose

The WN-723S voltage indicator is designed for continuous measurement and optical visualization of the voltage value in a three-phase network. Blanks the screen when idle. The indicator is activated by a touch button.

### Functioning


The indicated voltage range is 180÷270 V with a reading accuracy of 10 V. The switched on LED light indicates the voltage value described on its height. The voltage value between 190 V and 260 V is indicated by the green LEDs. The extreme values 180 V and 270 V are indicated by a red LED. Voltage lower than 180 V is indicated by the 180 V red LED flashing. Voltage higher than 270 V is indicated by the flashing of the diode located at the top, or in the case of operation in "bar" mode – flashing of the entire bargraph.

The device can operate in "bar" or "single diode" mode. The selection is made by shorting (or not) terminals 7-8.


When the power is turned on, the voltage value is displayed for

a period of 10 seconds, and then the LEDs go out. To display the value again, you need to touch the front of the device with your finger at the marked point.

## Operating modes




"Bar" mode,  
connection "without jumper"



"Single diode" mode,  
connection "with jumper"

## Triggering indication

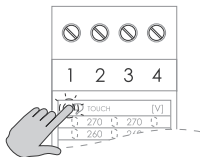


Voltage value  
is shown for 10 seconds,  
when you touch the marked point  
on the front of the housing

## Mounting

1. Disconnect the power supply.
2. Install the indicator on the rail in the distribution board.
3. Connect the power wires according to the diagram.
4. Select the device mode (terminals 7-8).
5. Switch on the power supply and verify that the device is working correctly.

## Wiring diagram

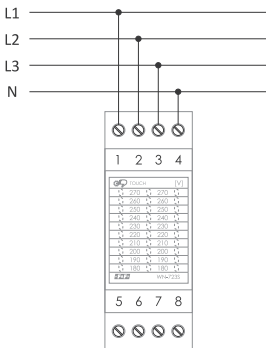

## Technical data

power supply	3×230 V+N
voltage indicator	3× (10×LED)
indication range	180÷270 V
working mode	bar mode or single diode mode
measurement error	<2%
reading accuracy	10 V
time of displaying the value after triggering	10 s
power consumption	<1 W
working temperature	-25÷50°C
terminal	2.5 mm <sup>2</sup> screw terminals (cord) 4.0 mm <sup>2</sup> screw terminals (wire)
tightening torque	0.5 Nm
dimensions	2 modules (35 mm)
mounting	on TH-35 rail
ingress protection	IP20

## Warranty

F&F products are covered by a 24-month warranty from the date of purchase. The warranty is only valid with proof of purchase. Contact your dealer or contact us directly.

## CE declaration

F&F Filipowski L.P. declares that the device is in conformity with the essential requirements of The Low Voltage Directive (LVD) 2014/35/EU and the Electromagnetic Compatibility (EMC) Directive 2014/30/UE.

The CE Declaration of Conformity, along with the references to the standards in relation to which conformity is declared, can be found [www.fif.com.pl](http://www.fif.com.pl) on the product subpage.