



F&F Filipowski sp. j.  
Konstantynowska 79/81, 95-200 Pabianice, POLAND  
phone/fax (+48 42) 215 23 83 / (+48 42) 227 09 71  
www.fif.com.pl; e-mail: biuro@fif.com.pl

## RM-07

RS-485 network  
amplifier/separator



**Do not dispose of this device in the trash along with other waste!**

According to the Law on Waste, electro coming from households free of charge and can give any amount to up to that end point of collection, as well as to store the occasion of the purchase of new equipment (in accordance with the principle of old-for-new, regardless of brand). Electro thrown in the trash or abandoned in nature, pose a threat to the environment and human health.



### Purpose

The RM-07 module serves as a signal amplifier for Modbus RTU transmission and as a galvanic separator for RS-485 networks. It amplifies the signal to extend the bus range and connect more devices. It can also be used for branching out lines and protecting them against electromagnetic interference.

### Functioning

Power on is indicated by the green U LED.

Red LEDs P1 and P2 indicate bidirectional (Rx/Tx) data transmission of the corresponding port of the module. P1 for port 4-6, P2 for port 10-12.


The module amplifies the signal in both directions. Galvanic separation is between port 10-12 and port 4-6 with 1-3 power. For proper operation of the module, the data transmission rate in the supported RS-485 network must be set.

The setting is made with a potentiometer on the front of the module by selecting one of the markings for a given baud rate.

Markings and baud rates assigned to them:

A	1200	F	19200
B	2400	G	28800
C	4800	H	38400
D	9600	I	56000
E	14400	K	115200


### Schematic of the RM-07 application

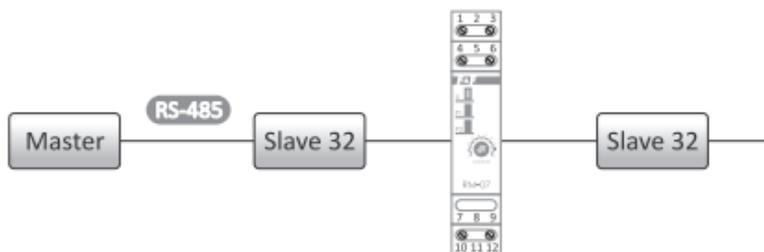

### Extension


To extend the bus by another group of 32 receivers.

Extendable up to 4 groups for baud rate of 9600.

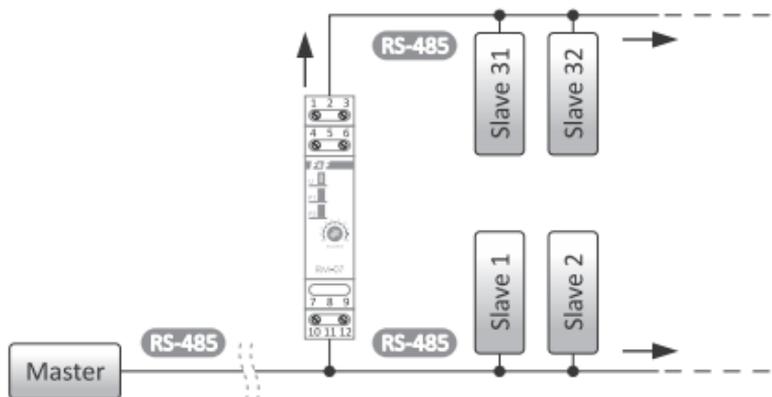


### Branch

To reduce the impact of interference caused by branching long signal lines.

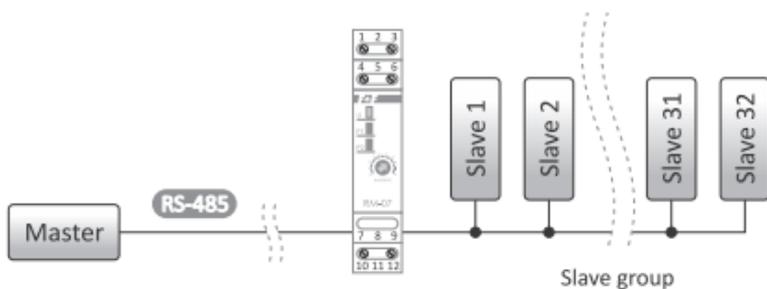

### Separation

To protect a group of receivers against interference generated on the long communication networks.

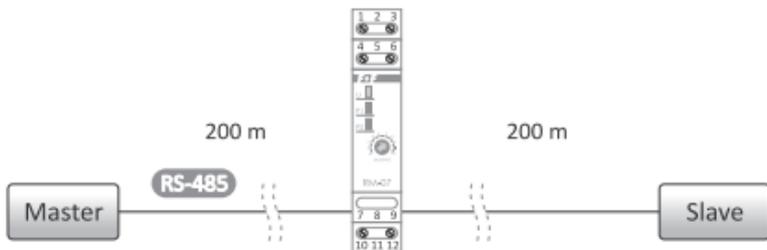


## Amplification

For signal amplification in long communication networks.

### Mounting

1. Turn off the power supply.
2. Mount the module on a rail in the distribution box at the point of separation or signal amplification.
3. Connect the RS-485 network cable according to the diagram.
4. Set the desired baud rate for the given RS-485 network.

## Wiring diagram

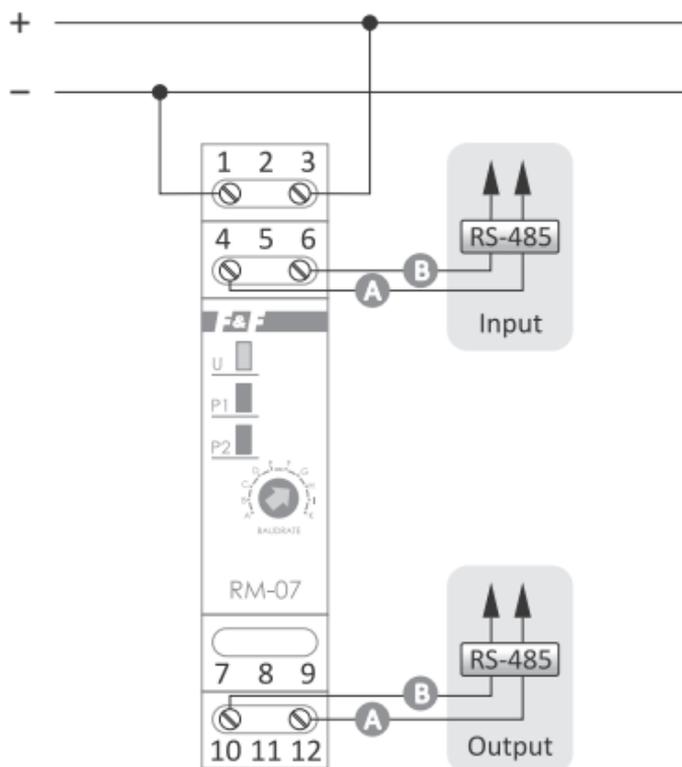

## Technical data

power supply	9÷30 V DC
baud rate	1200÷115200 bps
system current	<25 mA
separation	
RS-485 (input) <-> RS-485 (output)	galvanic 1 kV
supply <-> RS-485 (input)	resistive
supply <-> RS-485 (output)	galvanic 1 kV
working temperature	-25÷50°C
terminal	2.5 mm <sup>2</sup> screw terminals
tightening torque	0.4 Nm
dimensions	1 module (18 mm)
mounting	on TH-35 rail
protection level	IP20

## Warranty

The F&F products are covered by a warranty of the 24 months from the date of purchase. Effective only with proof of purchase. Contact your dealer or directly with us.

## CE declaration

F&F Filipowski sp. j. declares that the device is in conformity with the essential requirements of The Low Voltage Directive (LVD) 2014/35/EU and the Electromagnetic Compatibility (EMC) Directive 2014/30/UE.

The CE Declaration of Conformity, along with the references to the standards in relation to which conformity is declared, can be found at [www.fif.com.pl](http://www.fif.com.pl) on the product page.

**«F&F»<sup>®</sup>**